


Betriebsanleitung
 Operating Instructions
 Instructions de service
 Istruzioni d'uso
 Handleiding
 Instrucciones para el manejo
 Manual de instruções
 Naudojimosi instrukcija
 Kasutusjuhend
 Lietošanas instrukcija
 Οδηγίες χρήσης
 取扱説明書
 사용설명서






Driftsinstruks
 Driftsinstruktioner
 Käyttöohje
 Driftsvejledning
 Instrukcja obsługi
 Kezelési útmutató
 Návod k obsluze
 Navodilo za uporabo
 Návod na obsluhu
 El Kitabi
 Инструкция по эксплуатации
 使用说明书







VT 4.25







2006/42/EG

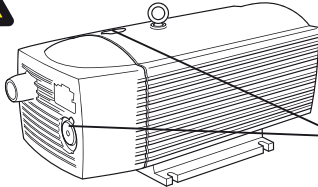

 	 	 MAX. VACUUM	BECKER D-42279 Wuppertal www.becker-international.com  No. year type frequency Hz speed min¹ power required kW inlet capacity m³/h max. vacuum MAX. VACUUM mbar Made in ☐ Germany mbar
    	 MAX. V	BECKER D-42279 Wuppertal www.becker-international.com  No. year type frequency Hz speed min¹ power required kW inlet capacity MAX. V m³/h max. pressure mbar Made in ☐ Germany m³/h	
 AIR	DIN EN ISO 3744	L_{pA} = 62 dB(A) - 50Hz L_{pA} = 67 dB(A) - 60Hz K_{pA} = 3 dB(A)	

   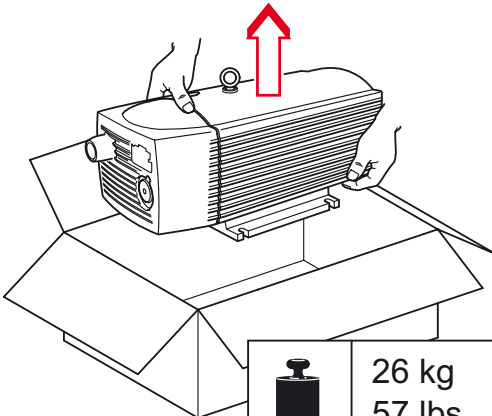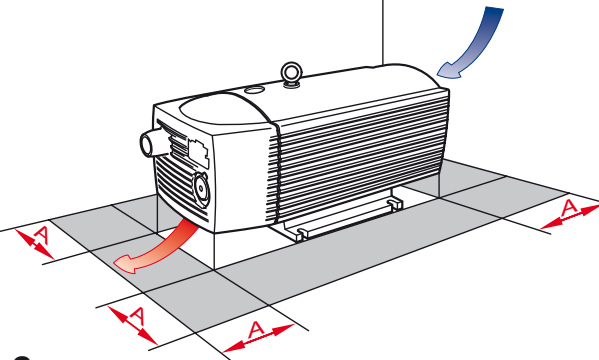
				A > 100mm A > 4"  > 5°C/41°F < 45°C/113°F %  max. 90% max. 800m   		
1  26 kg 57 lbs				2 		

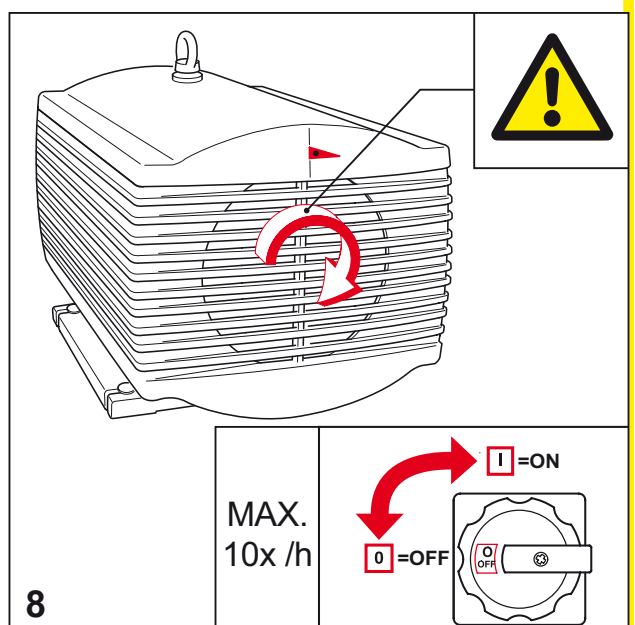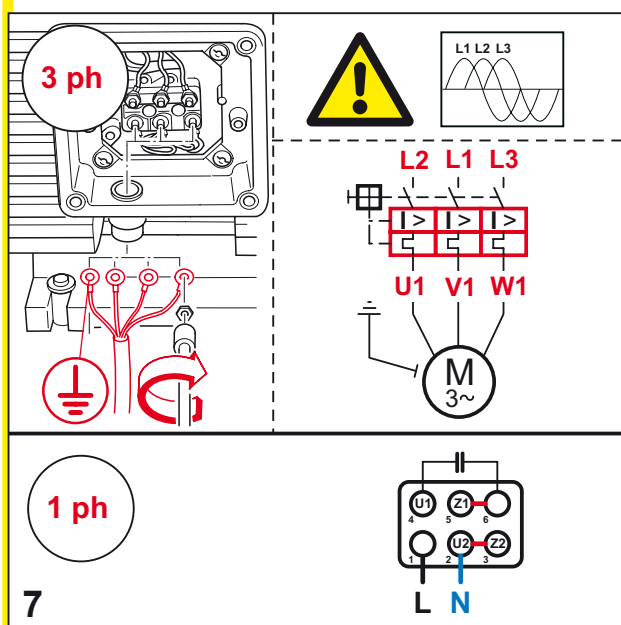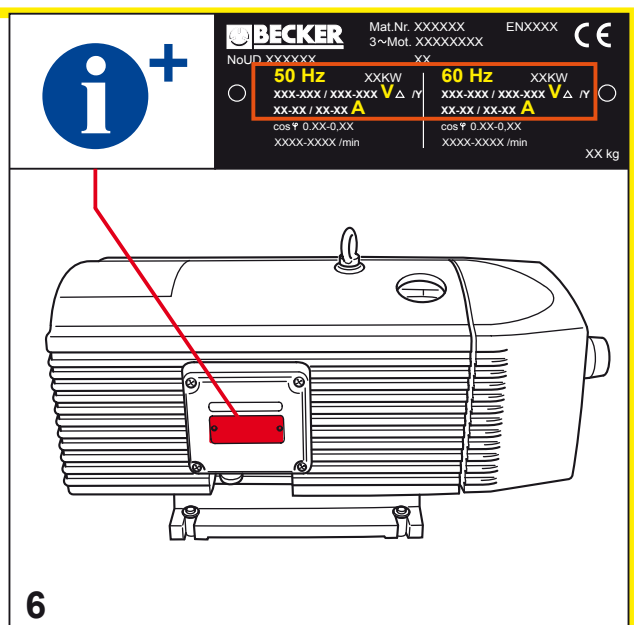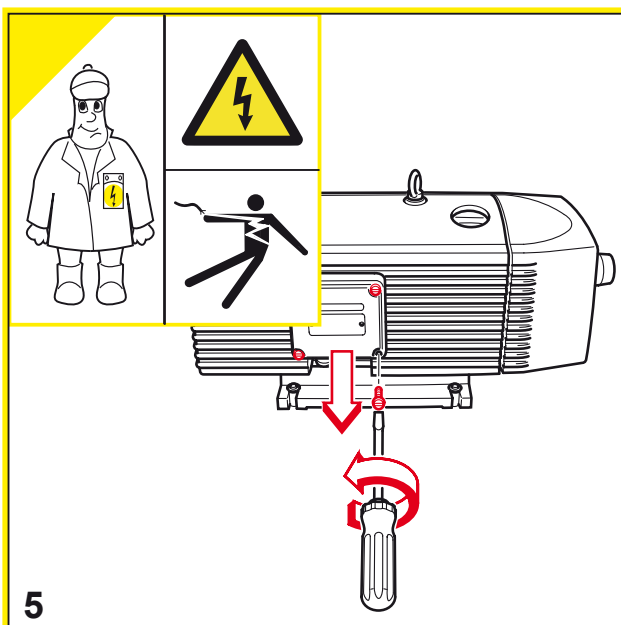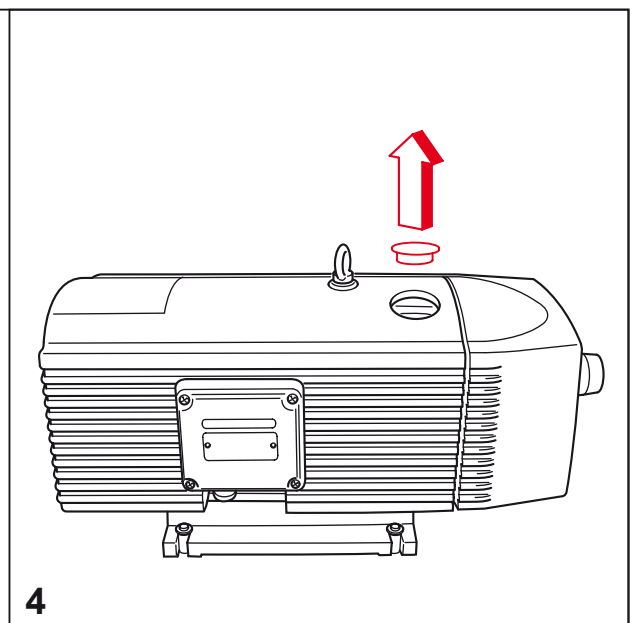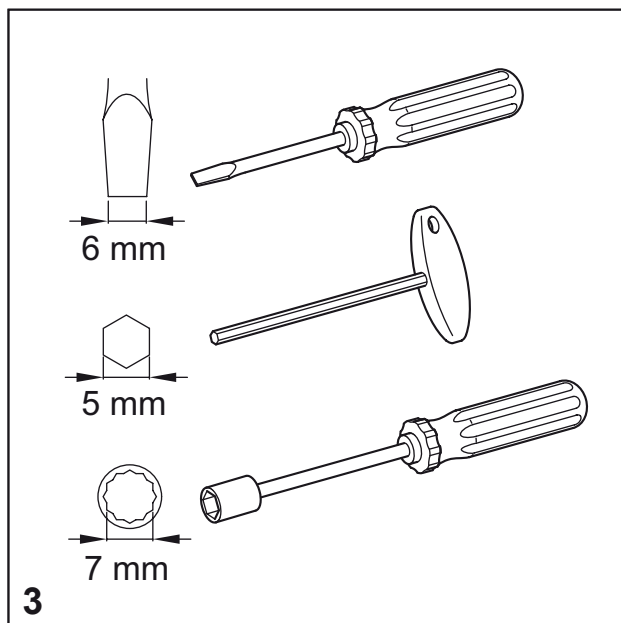

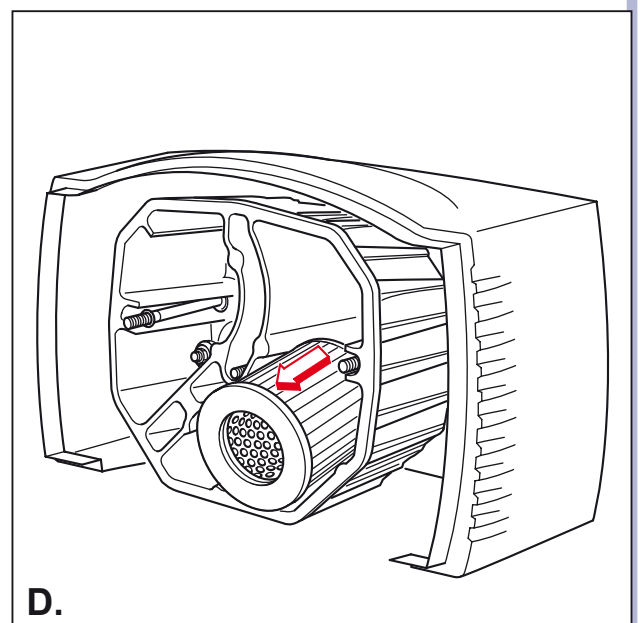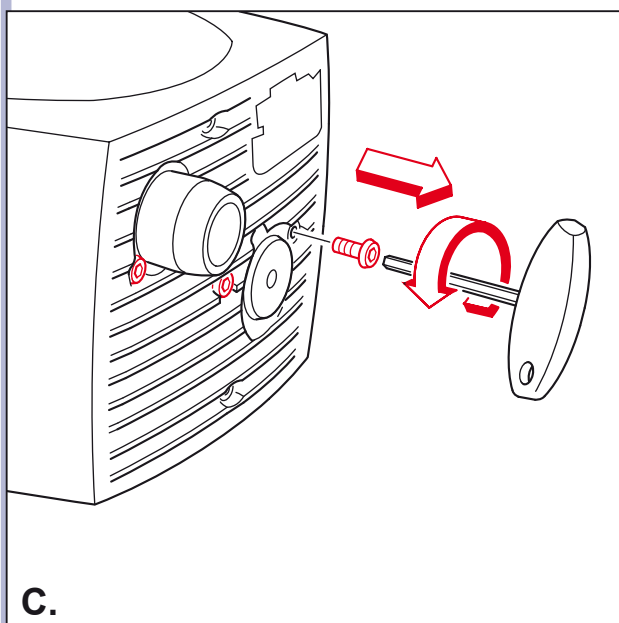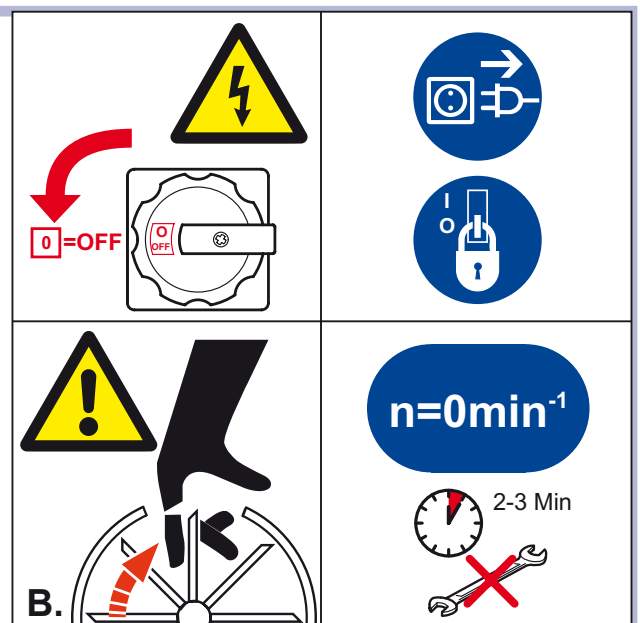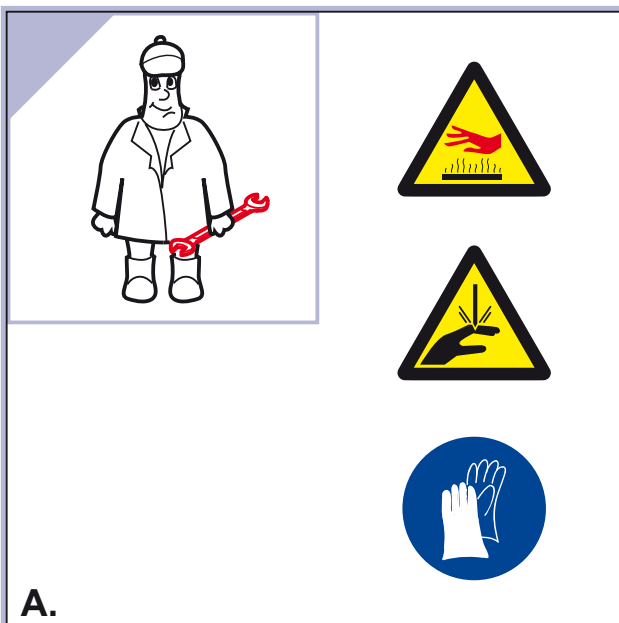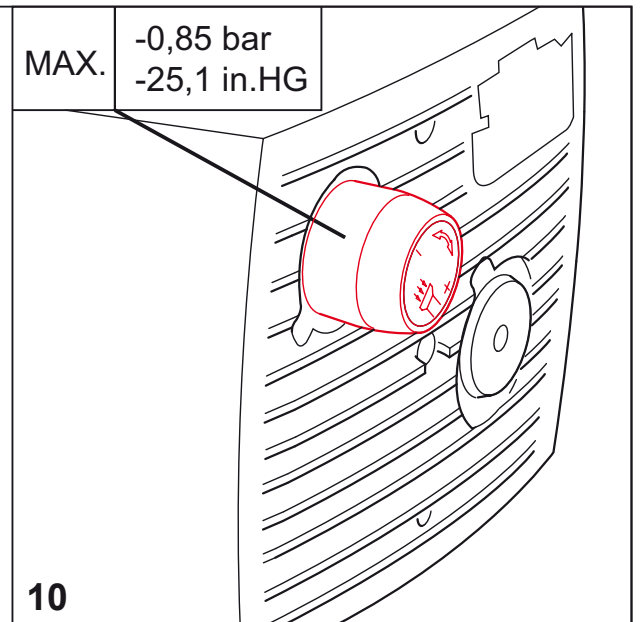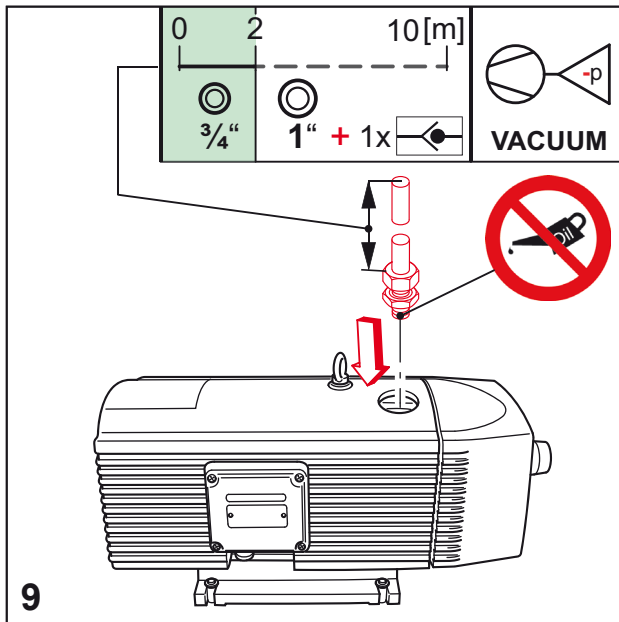


D: 64 mm H: 70 mm No.: 909505		

E.

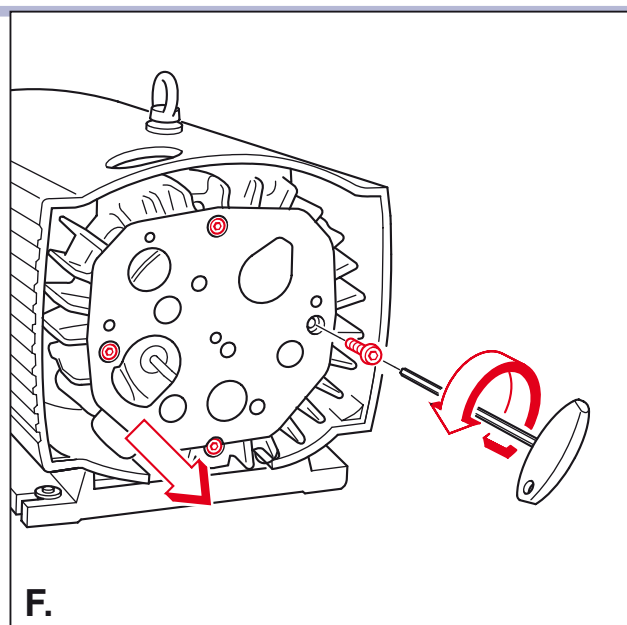

3000 h	
	$A_{MIN} > 28mm$ $A_{MIN} < 28mm$
VT 4.25 → No. 90134900007 (SET)	

G.

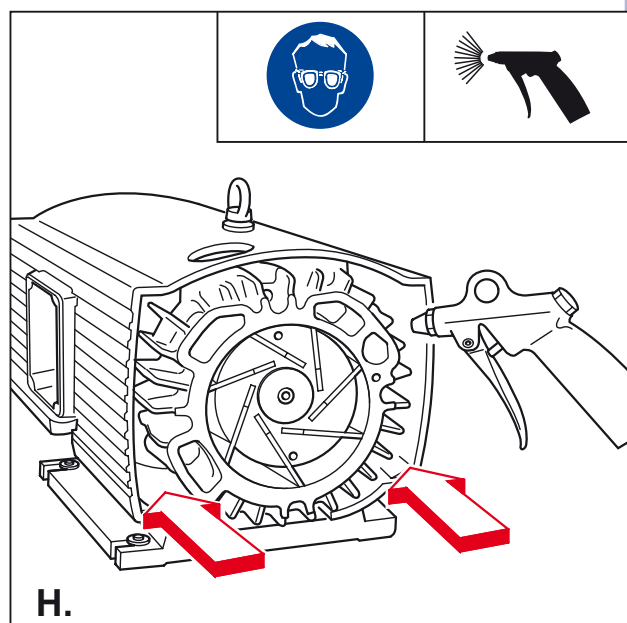

www.becker-international.com



Gebr. Becker GmbH
Hölker Feld 29-31
D-42279 Wuppertal

info@becker-international.com

(D) Service:

Tel: +49 (0)202 697-171

Fax: +49 (0)202 64 44 74